

DURACLUTCH INSTALLATION

15-517 DC-GENERAL-02

SVI, LLC REV2 03MAR2021

KIT PART #: 15-517-02

MODEL: DC-GENERAL-02

DESCRIPTION: MY16-21 GENERAL ALL MODELS CALIBRATION 02

KIT CONTENTS:

1. 10-216 ASM-DCPRIM WT10-171 SPR50-016 1000
2. 25-146 SHOULDER WASHER
3. 75-047 SCREW-CLUTCH
4. 99-007 TOOL-12MM BIT SOCKET 1/2 DRIVE (SUBSTITUTE 99-024 TOOL-12MM BIT SOCKET 3/8 DRIVE)
5. 10-158 SECONDARY CLUTCH 9.5 PREM ROLL (supersedes 10-140)
6. 90-030 QTY 1 WASHER-SECONDARY SHIM. SEE STEP 2
7. 75-058 SECONDARY SCREW-M10X1.25X65 8.8 HX ZY
8. 7556130 SECONDARY WASHER-.406X1.25X.125 BELLE-Y
9. 35-024 BELT (substitute 3211148)
10. 30-091 TOOL-BELT INSTALL
11. 97-030 DECAL-DC CLUTCH HOUSING DASH 35-024
12. 95-069 FILTER-CLUTCH INTAKE PRIMARY
13. INSTALL INSTRUCTIONS 95-069 FILTER
14. OWNERS MANUAL SUPPLEMENT
15. WEIGHT CHART
16. DURACLUTCH WARRANTY
17. INSTALL INSTRUCTIONS 15-517 (THESE INSTRUCTIONS)


DURACLUTCH INSTALLATION

1. Remove the clutch housing cover and the Secondary clutch.
2. Install the DURACLUTCH Secondary. Use the Secondary bolt and beveled washer supplied with this kit. Do not use O.E. (Original Equipment) hardware. Place the 90-030 shim washer on the transmission shaft. Place a drop of BLUE Loctite on the secondary bolt. Tighten the Secondary bolt to 45 ft-lbf.

Secondary shaft shown with one shim washer.



3. Remove Primary clutch bolt. Remove the Primary clutch with puller SVI 99-012 (PII 28772085). Greasing the end of the puller slightly will aid in removal. Do not get grease on any clutch components.
4. Clean the engine tapered shaft and Primary clutch bore with alcohol or degreaser. Do not lubricate.
5. Slip the belt into the Primary and over the Secondary.
6. Install DURACLUTCH Primary with hardware provided as shown. Tighten bolt to 60 ft-lbf.

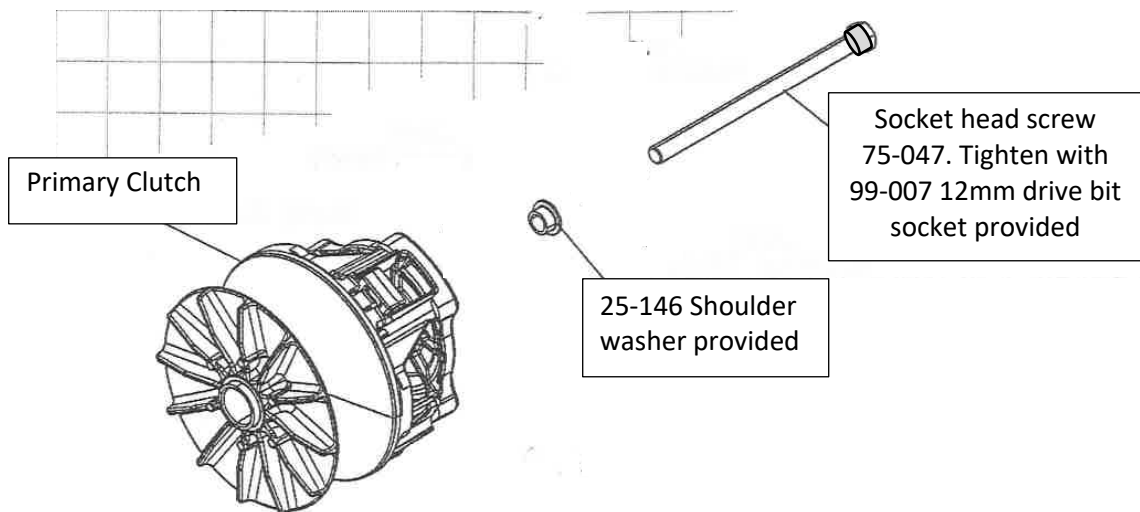

Do not use original equipment screw or hardware with primary.


7. Install the Belt as follows if the Primary and Secondary are already installed. Place Belt in the Primary and open the Secondary sheaves with the Belt Installation Tool provided (see photo). Roll belt into the Secondary sheaves.



8. Preliminary installation check.
- A. Put transmission in PARK. APPLY FOOT BRAKE TO INSURE VEHICLE REMAINS STATIONARY.
 - B. Start the engine and apply slight throttle to engage Primary clutch packs to rotate clutches and seat belt in sheaves. The clutches may rotate slowly when in PARK (or NEUTRAL). This is normal.
 - C. Drop throttle. With engine at idle shift transmission to HI, LO and REV. The transmission should shift smoothly.
9. Install outer clutch housing. Ensure seal is good or replace with DURACLUTCH seal part # 35-045. The DURACLUTCH primary is slightly larger than the original equipment primary. To insure the primary does not rub against the cover push up and back on the housing while lightly snug the bottom screws. Then tighten the top rear screw followed by the other top screws. Then tighten all remaining screws including the bottom screws evenly. After starting the engine if you hear the primary rubbing, push on the cover while the engine is running in different directions to see which way will eliminate the rubbing. Stop the engine and loosen the housing screws and retighten using the above sequence while pushing on the cover in the direction that eliminated the rubbing. If this does not eliminate the rubbing, try installing a new gasket, DURACLUTCH part # 35-045 and go through the bolt tightening sequence again. If you cannot eliminate the rubbing the cover is heat warped and you may have to install a new cover and perhaps a new back plate. You may also try using a heat gun to remove heat sag in the cover.
10. Drive vehicle for 5 miles to break-in DURACLUTCH kit components.
NOTE: If the transmission still shifts hard after break-in there are likely issues other than drag in the clutches. See your dealer or call DURACLUTCH service (218-967-8205).
11. Install 95-069 Clutch Intake Filter. Follow instructions provided with filter.

DECALS

Apply two decals as shown – one on the clutch housing and one on the dash. Clean surface with alcohol or similar solvent. Decal application is important to alert service technicians that the standard Polaris clutches have been replaced.

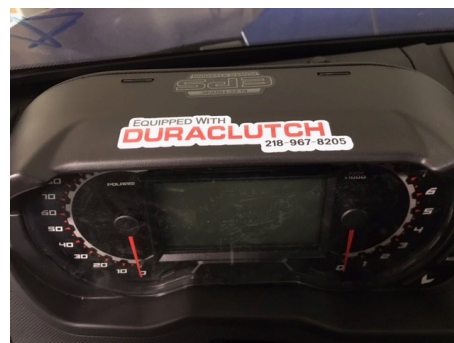

To watch 15-517 DURACLUTCH GENERAL Kit installation video go to www.duraclutch.com

MY2016 & 2017 GENERAL models do not come with this filter installed from the factory. The Tire throws up dirt and dust into clutch cooling air intake. This 95-043 Filter must be installed over intake grill for clutch durability. If you purchase DURACLUTCH kit 15-517 for a MY2016 or 2017 GENERAL, purchase a 95-043 Filter also. Retail is \$27.99.



Completed installation.